




UNEEDA ENTERPRIZES, INC.

EXCELLENCE IN COATED ABRASIVES

EDRUFLEX BRUSHES

- Note the correct direction of rotation
- Optimum rpm: see table below
- Maximum rpm: 1500
- Let the brush run for at least 2 hours on a rough piece of wood. The abrasive will then lose it's initial sharpness.
- While breaking in, the brush will lose fibers. This is normal and will stop after a few hours.
- Make sure that the brush does not become contaminated due to wet paint or lacquer, it's effectiveness will be lost.
- When using a number of brushes on one shaft we recommend rotating the brushes in order to make the best possible use of one set.

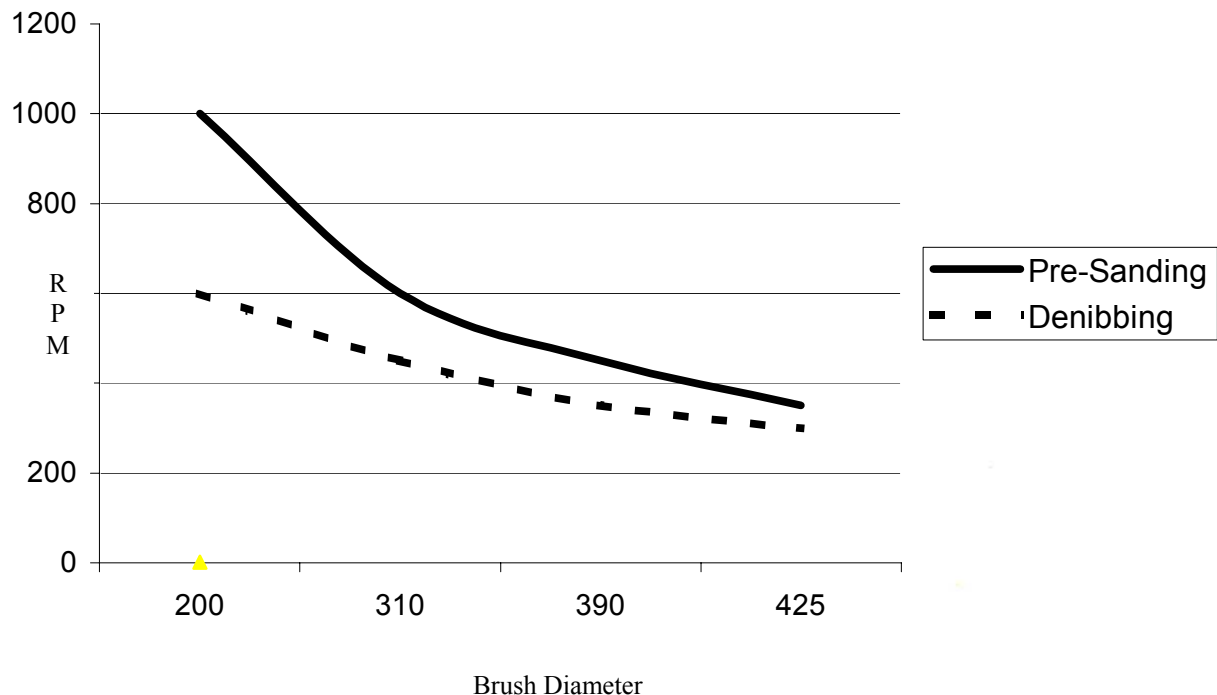

sandpaper.com

● 640 Chestnut Ridge Rd. P.O. Box 209 Spring Valley N.Y. 10977 ●

Tel (845) 426.2800 Tel (800) 431.2494 Fax (845) 426.2810 e-mail sales@uneeda.com www.sandpaper.com